

## IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including but not limited to the following:

### READ ALL INSTRUCTIONS BEFORE USE

#### DANGER—To reduce the risk of electrocution:

1. Do not place or store the Clarisonic charging cradle where it can fall or be pulled into a tub or sink.
2. Do not place the Clarisonic charging cradle in or drop the cradle or plug into water or other liquid. Charger unit is not for immersion or for use in the shower.
3. Do not reach for a Clarisonic charging cradle or plug that has fallen into water. Unplug immediately.

#### WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons

1. Close supervision is necessary when this product is used by, on, or near children or physically challenged persons.
  2. Use this product only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
  3. Keep the cord away from heated surfaces.
  4. Never use while sleeping or drowsy.
  5. Do not use outdoors or where oxygen is being administered.
- Never operate the Clarisonic brush handle if it is damaged. Do not operate the charging cradle if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call Clarisonic at 888-525-2747.

## SAVE THESE INSTRUCTIONS

The handle and the charging cradle have no serviceable parts. The supply cord cannot be replaced. If the cord is damaged, the charging cradle must be unplugged and replaced. Call Clarisonic at 888-525-2747.

NOTE: This equipment has been tested and found to comply with Part 18 of the FCC Rules. Refer to our website for further information.

## IMPORTANT CAUTIONS AND WARNINGS

If you are under a doctor's care for any skin condition or if you think you may have a skin condition, please consult your physician before using the Clarisonic. Refer to our website for more information.

We recommend that you **do not** share brush heads if you and/or any other Clarisonic user suffer from any skin conditions.

We recommend that you start with one of the Clarisonic cleansers that has been optimized for gentle daily use with the Clarisonic. Do not use the Clarisonic with jagged exfoliating particles such as shells. Clarisonic brushes may be used with soft, rounded exfoliating particles.

Using the Clarisonic to remove makeup may stain the bristles, but will not affect performance. If discoloration occurs, clean the brush head with soap and water.

This product uses magnets.

## WARRANTY

We are happy to offer a 30 day money back guarantee. If you are for any reason dissatisfied with the purchase of your Clarisonic from an authorized dealer, call Customer Service at 888-525-2747 to make arrangements for the return.

In addition, every Clarisonic comes with a two-year warranty covering any problems resulting from everyday use of the product. Call Customer Service at 888-525-2747 if you feel your Clarisonic is not operating properly.

## ALSO AVAILABLE FROM CLARISONIC

Your Clarisonic Skin Cleansing System includes samples of Clarisonic cleansers optimized for use with your Clarisonic. We also offer Normal and Delicate brush heads. Purchase Clarisonic products from your skin care professional, spa, Clarisonic retailer, or from clarisonic.com.

888-525-2747 | clarisonic.com

### RENEWAL SERUM *(for all skin types)*

Apply this translucent soothing serum after using Clarisonic for healthy, radiant skin.

### CLEANSERS

Gentle Hydro Cleanser *(for normal to sensitive skin)*

Nourishing Care Cleanser *(for dry and mature skin)*

Refreshing Gel Cleanser *(for oily skin)*

Refining Skin Polish *(for all skin types)*

### BRUSH HEADS *(for the face)*

Normal *(gray)*

Sensitive *(white)*

Delicate *(blue)*



## REGISTER TODAY

Register and become a Clarisonic Preferred Customer and receive a \$25 savings offer!\*

To register your Clarisonic go to [www.clarisonic.com/registration](http://www.clarisonic.com/registration). Sign up for Clarisonic Email and gain access to sneak previews of new product introductions and great insider skin care tips.

888-525-2747 | clarisonic.com

Clarisonic respects your privacy: we do not share your personal information with any third parties.

\*See [www.clarisonic.com/registration](http://www.clarisonic.com/registration) for \$25 Savings offer requirements.

Visit [clarisonic.com](http://clarisonic.com) for more comprehensive information including product user guide updates, customer reviews, frequently asked questions, and more.

clarisonic

© Pacific Bioscience Laboratories, Inc., 2010. All rights reserved. Clarisonic and T-TIMER are registered trademarks of Pacific Bioscience Laboratories, Inc.

Pacific Bioscience Laboratories, Inc.  
13222 SE 30th Street #A1  
Bellevue WA 98005  
Toll Free: 888-5-CLARISONIC or 888-525-2747  
Assembled in USA

PBL04604B

Become a Clarisonic Preferred Customer  
Details on back

# CLASSIC SONIC SKIN CLEANSING USER GUIDE

2  
SPEEDS

clarisonic





- A HANDLE**
- B BRUSH HEAD (Sensitive)**
- C CHARGING CRADLE**
- D POWER BUTTON**
- E GREEN LIGHT**  
charge indicator
- F AMBER LIGHT**  
speed indicator

## YOUR CLARISONIC

The essential first step in your daily skin care ritual, Clarisonic® is a professional-caliber brush that uses a gentle sonic micro-massage action to cleanse deeply. Clarisonic gently clears pores without harsh abrasion or chemicals, cleansing so effectively that skin care products absorb better. Clinical results include 6x more makeup removed than manual cleansing, reduced appearance of pores, fine lines and wrinkles, and improved skin tone.

## READ ALL INSTRUCTIONS BEFORE USE

### TO USE

**Prior to the first use, charge the Clarisonic handle for 24 hours.**


If you wear makeup, remove eye makeup by hand.

Wet your skin and the brush head with warm water. Liberally apply cleanser to your skin or to the brush head. Push the power button to turn your Clarisonic on and gently move the brush using a small circular motion, beginning on the forehead, then moving to the nose/chin area and the cheeks at the T-TIMER® prompts.

Pressing too hard will impede the motion of the brush and reduce its effectiveness. The outer brushes are designed to contain any residual mist from the brush oscillation, so be sure to hold the brush head flush to your skin.

The Clarisonic handle is waterproof and may be used in the shower or bathtub. Refer to Important Safeguards regarding the charging cradle.

Gently move the brush using a small circular motion.

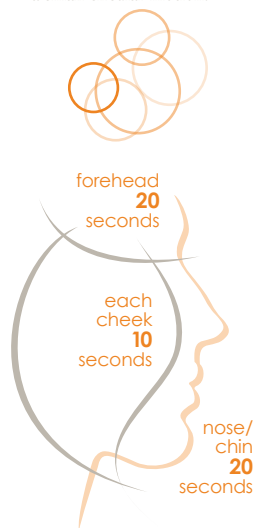

Cleanse your face using our T-TIMER recommended duration and zones.

## CUSTOMIZING YOUR CLARISONIC

The Clarisonic is packaged with a Sensitive brush head (white base) installed. We also offer optional face brush heads for different skin types.

### SPEED SETTINGS

The Clarisonic offers a choice of 2 speeds: normal and low. Speed is indicated both audibly and visually. To change speeds, press the button while the Clarisonic is on, then press and hold for about 3 seconds until you hear an audible signal that the speed is changed. The factory setting is low speed.

#### Speed settings for facial cleansing

Speed	Audible indication	Visible indication
Normal	3 ascending beeps	amber light on
Low	3 descending beeps	no lights on

### CLEANSING TIMER (T-TIMER®)

For even and thorough cleansing of your face, the Clarisonic features a proprietary T-TIMER that beeps and pauses momentarily to indicate it is time to move to another part of your face. We recommend the one-minute setting: 20 seconds on your forehead, 20 seconds on your nose/chin, and 10 seconds on each cheek.

T-TIMER settings for facial cleansing are indicated by different audible sequences. To change the setting, press and hold the power button for 10 seconds. To change to a different setting, release the power button, then press again and hold for 10 seconds.

Audible indication	Cleansing duration	T-TIMER beeps
1 long beep & 2 short beeps	2 minutes	at 40, 80, and 100 seconds
1 long beep only	2 minutes	none
1 long beep & 1 short beep	1 minute (this is factory selected default)	at 20, 40, and 50 seconds

**To pause** the cleansing cycle for up to 30 seconds, simply press the power button. The amber light flashes in pause mode. To resume, press the power button.

## CARING FOR YOUR CLARISONIC

To keep your Clarisonic in optimum condition, care for it as follows. Do not use abrasive cleaners or chemicals to clean any part of the Clarisonic. Do not put any part of the Clarisonic in a dishwasher.

### HANDLE

Once a week remove the brush head and wash the handle using warm soapy water to remove any residue buildup. The handle is sealed and fully waterproof. Never attempt to open the brush handle for any reason.

**INFREQUENT USE:** The Clarisonic handle needs to receive a charge occasionally. If you rarely use the handle, place it in the charger every 3 months to maintain its charging capability.

We recommend that you keep the handle in the charging cradle when not in use. Secure the cord with a tie-wrap.

### CHARGING CRADLE

**IMPORTANT:** Unplug the charging cradle before you clean it. After unplugging the cradle, wipe it with a soft, damp cloth. Do not immerse the charging cradle in water.

### BRUSH HEADS

We recommend that the Clarisonic brush head be replaced every 3 months as the bristles become fatigued and less effective over time. Once a week, remove the brush head from the handle and rinse with warm soapy water to remove any residue.

**To remove** the brush head, ① grip the brush head firmly, then push and twist it counter-clockwise (like a medicine cap). ② Pull the head away from the handle.

**To attach** the brush head, push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

**TIP:** Use the brush head cap to easily remove and attach the brush head with a simple twist.



## CHARGING

Your system kit includes a charging cradle designed to hold and charge the brush handle.

Place your Clarisonic in its charging cradle overnight to recharge it. A full charge allows up to 30 minutes of use. When the battery is low, the brush handle will beep immediately after use to alert you to place it in the cradle for charging.

If your Clarisonic stops working, place it in the charger for a minimum of 5 hours. If the issue is not resolved, please contact Customer Service.

### DOMESTIC CHARGER

#### for use in the US and Canada

Compatible with 120 Volts AC/60 Hz outlets.



For proper charging place handle in the charger as shown