

## IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including but not limited to the following:

### READ ALL INSTRUCTIONS BEFORE USE

#### DANGER—To reduce the risk of electrocution:

1. **Do not** place or store the Clarisonic charging cradle where it can fall or be pulled into a tub or sink.
2. **Do not** place the Clarisonic charging cradle in or drop the cradle or plug into water or other liquid. Charger unit is not for immersion or for use in the shower.
3. **Do not** reach for a Clarisonic charging cradle or plug that has fallen into water. Unplug immediately.

#### WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons

1. Close supervision is necessary when this product is used by, on, or near children or physically challenged persons.
2. Use this product only for its intended use as described in this manual. **Do not** use attachments not recommended by the manufacturer.
3. Keep the cord away from heated surfaces.
4. Never use while sleeping or drowsy.
5. Do not use outdoors or where oxygen is being administered.

Never operate the Clarisonic brush handle if it is damaged. Do not operate the charging cradle if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call Clarisonic at 888-525-2747.

## SAVE THESE INSTRUCTIONS

The handle and the charging cradle have no serviceable parts. The supply cord cannot be replaced. If the cord is damaged, the charging cradle must be unplugged and replaced. Call Clarisonic at 888-525-2747.

NOTE: This equipment has been tested and found to comply with Part 18 of the FCC Rules. Refer to our website for further information.

## IMPORTANT CAUTIONS AND WARNINGS

If you are under a doctor's care for any skin condition or if you think you may have a skin condition, please consult your physician before using the Clarisonic. Refer to our website for more information.

We recommend that you **do not** share brush heads if you and/or any other Clarisonic user suffer from any skin conditions.

We recommend that you start with one of the Clarisonic cleansers that has been optimized for gentle daily use with the Clarisonic.

**Do not** use the Clarisonic with jagged exfoliating particles such as shells. Clarisonic brushes may be used with soft, rounded exfoliating particles.

Using the Clarisonic to remove makeup may stain the bristles, but will not affect performance. If discoloration occurs, clean the brush head with soap and water.

This product uses magnets.

## WARRANTY

We are happy to offer a 60 day money back guarantee. If you are for any reason dissatisfied with the purchase of your Clarisonic from an authorized dealer, call Customer Service at 888-525-2747 to make arrangements for the return.

In addition, every Clarisonic comes with a three-year warranty covering any problems resulting from everyday use of the product. Call Customer Service at 888-525-2747 if you feel your Clarisonic is not operating properly.

## ALSO AVAILABLE FROM CLARISONIC

Your Clarisonic PRO Skin Cleansing System includes samples of Clarisonic cleansers optimized for use with your Clarisonic. We also offer Normal and Delicate brush heads. Purchase Clarisonic products from your skin care professional, spa, Clarisonic retailer, or from clarisonic.com.

### RENEWAL SERUM *(for all skin types)*

Apply this translucent soothing serum after using Clarisonic for healthy, radiant skin.

### CLEANSERS

Gentle Hydro Cleanser *(for normal to sensitive skin)*

Nourishing Care Cleanser *(for dry and mature skin)*

Refreshing Gel Cleanser *(for oily skin)*

Refining Skin Polish *(for all skin types)*

### BRUSH HEADS *(for the face)*

Normal *(gray)*

Sensitive *(white)*

Delicate *(blue)*



### BODY BRUSH HEAD

### OPAL™ SONIC INFUSION SYSTEM

Opal brings proven sonic technology to eye care, for better than manual serum application. Opal provides more than 7500 gentle micro-massages per minute to instantly hydrate, smooth, and brighten eyes.

888-525-2747 | clarisonic.com

## REGISTER TODAY

Register and become a Clarisonic Preferred Customer and receive a \$25 savings offer!\*

To register your Clarisonic go to [www.clarisonic.com/registration](http://www.clarisonic.com/registration). Sign up for Clarisonic Email and gain access to sneak previews of new product introductions, special event invitations, and great insider skin care tips.

888-525-2747 | clarisonic.com

Clarisonic respects your privacy: we do not share your personal information with any third parties.

\*See [www.clarisonic.com/registration](http://www.clarisonic.com/registration) for \$25 Savings offer requirements.

Visit [clarisonic.com](http://clarisonic.com) for more comprehensive information including product user guide updates, customer reviews, frequently asked questions, and more.

clarisonic

© Pacific Bioscience Laboratories, Inc. 2010. All rights reserved. Clarisonic and T-TIMER are registered trademarks and Opal is a trademark of Pacific Bioscience Laboratories, Inc.

Pacific Bioscience Laboratories, Inc.  
13222 SE 30th Street #A1  
Bellevue WA 98005  
Toll Free: 888-5-CLARISONIC or 888-525-2747

Assembled in USA

PBL04600C

# PRO SONIC SKIN CLEANSING USER GUIDE

Become a Clarisonic  
Preferred Customer  
Details on back

4

SPEEDS

clarisonic





- A HANDLE**
- B BRUSH HEAD (Sensitive)**
- C ON/OFF BUTTON**
- D SPEED BUTTON**
- E SPEED INDICATOR**
- F CHARGE INDICATOR**
- G CHARGING CRADLE**

## YOUR CLARISONIC

The essential first step in your daily skin care ritual, Clarisonic® is a professional-caliber brush that uses a gentle sonic micro-massage action to cleanse deeply. Clarisonic gently clears pores without harsh abrasion or chemicals, cleansing so effectively that skin care products absorb better. Clinical results include 6x more makeup removed than manual cleansing, reduced appearance of pores, fine lines and wrinkles, and improved skin tone.

## READ ALL INSTRUCTIONS BEFORE USE

### TO USE

**Prior to the first use, charge the Clarisonic handle for 24 hours.**

If you wear makeup, remove eye makeup by hand.

Wet your skin and the brush head with warm water. Liberally apply cleanser to your skin or to the brush head. Push the on/off button to turn your Clarisonic on and gently move the brush using a small circular motion, beginning on the forehead, then moving to the nose/chin area and the cheeks at the T-TIMER® prompts.

Pressing too hard will impede the motion of the brush and reduce its effectiveness. The outer brushes are designed to contain any residual mist from the brush oscillation, so be sure to hold the brush head flush to your skin.

The Clarisonic handle is waterproof and may be used in the shower or bathtub. Refer to Important Safeguards regarding the charging cradle.


## CUSTOMIZING YOUR CLARISONIC

The Clarisonic is packaged with a Sensitive brush head (white base) installed. We also offer facial brush heads for different skin types, and an optional Body Brush Head to care for areas of the body needing extra attention.

With a facial brush head attached, all speed settings gently and effectively cleanse the face. The high speed setting is particularly effective for the décolleté.

With the Body Brush Head attached, the Clarisonic automatically initiates body mode (constant or pulse). The Body Brush Head is not for use on the face.

Gently move the brush using a small circular motion.

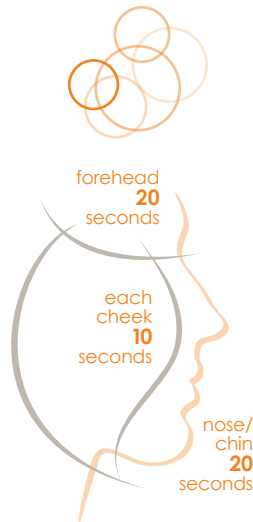

Cleanse your face using our T-TIMER recommended duration and zones.

## SPEED SETTINGS

The Clarisonic PRO offers a choice of 4 speeds: pro, high, normal and low. Speed is indicated both audibly and visually. To change speeds, press the speed button while the Clarisonic is on. The factory setting is low speed.

### Speed settings for facial cleansing

Speed	Audible indication	Visible indication
Pro	5 ascending beeps	both red lights on
High	4 ascending beeps	upper red light on
Normal	3 ascending beeps	lower red light on
Low	3 descending beeps	no red lights on

### Body modes for cleansing targeted areas of the body

Constant	no beeps	upper red light on
Pulse	no beeps	lower red light on

## CLEANSING TIMER (T-TIMER®)

For even and thorough cleansing of your face, the Clarisonic features a proprietary T-TIMER that beeps and pauses momentarily to indicate it is time to move to another part of your face. We recommend the one-minute setting: 20 seconds on your forehead, 20 seconds on your nose/chin, and 10 seconds on each cheek.

T-TIMER settings for facial cleansing are indicated by different audible sequences. To change the setting, press and hold the on/off button for 2 seconds. To change to a different setting, release the on/off button, then press twice and hold.

Audible indication	Cleansing duration	T-TIMER beeps
1 long beep & 2 short beeps	2 minutes	at 40, 80, and 100 seconds
1 long beep only	2 minutes	none
1 long beep & 1 short beep	1 minute (this is factory selected default)	at 20, 40, and 50 seconds

### With optional Body Brush Head attached

No beeps	3 minutes	none
----------	-----------	------

**To pause** the cleansing cycle for up to 30 seconds, simply press the on/off button. The red lights flash in pause mode. To resume, press the on/off button.

## CARING FOR YOUR CLARISONIC

To keep your Clarisonic in optimum condition, care for it as follows. Do not use abrasive cleaners or chemicals to clean any part of the Clarisonic. Do not put any part of the Clarisonic in a dishwasher.

### HANDLE

Once a week remove the brush head and wash the handle using warm soapy water to remove any residue buildup. The handle is sealed and fully waterproof. Never attempt to open the brush handle for any reason.

**INFREQUENT USE:** The Clarisonic handle needs to receive a charge occasionally. If you rarely use the handle, place it in the charger every 3 months to maintain its charging capability.

We recommend that you keep the handle in the charging cradle when not in use. Secure the cord with a tie-wrap.

### CHARGING CRADLE

**IMPORTANT:** Unplug the charging cradle before you clean it. After unplugging the cradle, wipe it with a soft, damp cloth. Do not immerse the charging cradle in water.

### BRUSH HEADS

We recommend that the Clarisonic brush head be replaced every 3 months as the bristles become fatigued and less effective over time. Once a week, remove the brush head from the handle and rinse with warm soapy water to remove any residue.

**To remove** the brush head, ① grip the brush head firmly, then push and twist it counter-clockwise (like a medicine cap). ② Pull the head away from the handle.

**To attach** the brush head, push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

**TIP:** Use the brush head cap to easily remove and attach the brush head with a simple twist.



## CHARGING

Your system kit includes a charging cradle to hold and charge the brush handle.

Place your Clarisonic in its charging cradle overnight to recharge it. Allow 24 hours for a full charge. A full charge allows up to 30 minutes of use, and about 20 minutes of use with the optional Body Brush Head. The green lights on the back of the handle indicate charge level. When the battery is low, the brush handle will beep immediately after use to alert you to place it in the cradle for charging.

If your Clarisonic stops working, place it in the charger for a minimum of 5 hours. If the issue is not resolved, please contact Customer Service.

Your system kit may include one of these charging cradle models:

### DOMESTIC CHARGING CRADLE for use in the US and Canada

Compatible only with 120 Volts AC/60 Hz outlets.

### UNIVERSAL CHARGING CRADLE for worldwide use

Compatible with international and domestic outlets (100-240 Volts AC; 50/60 Hz) with the respective country plug adapter.

If the shape of the plug does not fit the power outlet, use an attachment plug adapter of the proper configuration for the power outlet.



For proper charging place handle in the charging cradle as shown



Universal charging cradle