

A white Clarisonic Mia 2 Sonic Skin Cleansing device is shown against a background of white foam. The device has a circular head with a clear cap that is partially open, revealing a black ring of bristles. Below the head is a control panel with two buttons: a diamond-shaped button and a power button. The brand name 'clarisonic' is printed in orange at the top of the page.

clarisonic[®]

Mia 2[™] SONIC
SKIN
CLEANSING

User Guide

Two Speeds

Two-Year Warranty

One-Minute Pulsing T-Timer[®]

Protective Travel Case

Healthy skin begins with cleaner skin.
Cleaner skin begins with Clarisonic.

Become a **Clarisonic Preferred Customer**

Details on back

- (A) HANDLE**
 - (B) BRUSH HEAD**
 - (C) ON/OFF BUTTON**
 - (D) SPEED BUTTON**
 - (E) pLink® CHARGER**
 - (F) PLUG**
 - (G) SPEED/CHARGER INDICATOR**
- PROTECTIVE TRAVEL CASE**
(Select models, not shown)



YOUR CLARISONIC® *Mia 2*™

The essential first step in your daily skin care ritual, Mia 2 is a professional-caliber brush that uses a gentle sonic micro-massage action to cleanse deeply. Mia 2 gently clears pores without harsh abrasion or chemicals, cleansing so effectively that skin care products absorb better. Results include 6x better cleansing than manual cleansing, reduced appearance of pores, fine lines and wrinkles, and improved skin tone.†

The Mia 2 handle is waterproof for use in the shower or bathtub. Refer to Important Safeguards regarding the charger.

† Data on file.

READ ALL INSTRUCTIONS BEFORE USE

TO USE

Prior to the first use, charge the Clarisonic Mia 2 handle for 24 hours.

- If you use makeup, remove eye makeup by hand.
- Wet your skin and the brush head with warm water.
- Liberally apply cleanser to your skin or to the brush head.
- Push the on/off button to turn on your Mia 2.
- Select desired speed.
- Follow T-TIMER® prompts while gently moving brush head in small circular motions.
- Mia 2 will automatically shut off after one minute

NOTE: Keep brush head flush to the skin. Pressing too hard will impede the motion and reduce effectiveness.

FEATURES OF YOUR CLARISONIC *Mia 2*™

SPEED SETTINGS

The Mia 2 offers a choice of 2 speeds: low, and normal. To change speeds, press the speed button while the Clarisonic Mia 2 is on. The factory setting is low speed. Speed is indicated visually.


Speed settings for facial cleansing

Speed	Visible indication
Low	lower LED light on
Normal	upper LED light on

CLEANSING TIMER (T-TIMER®)

For even and thorough cleansing of your face, the Mia 2 features a proprietary T-TIMER that pauses momentarily to indicate it is time to move to another part of your face. Your Clarisonic is set to a one-minute setting: 20 seconds on your forehead, 20 seconds on your nose/chin, and 10 seconds on each cheek.

To pause the cleansing cycle for up to 30 seconds, simply press the on/off button. The lights around the button flash in pause mode. To resume, press the on/off button.

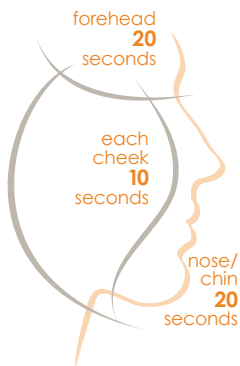

CHARGING

Your Mia 2 is rechargeable with the included pLink charger, which magnetically attaches to the handle as shown. A fully charged Mia 2 gives 24 minutes of use.



Charge Indicators

Action	Indicator
Attach pLink charger	Brush head pulses once
Charge the handle	Charge indicator lights fade in and out while charging Charge indicator lights glow solid when fully charged
Detach pLink charger	Brush head pulses once if partially charged Brush head pulses twice if fully charged
After 24 minutes of use, the handle needs to be charged	Brush head pulses and charge indicator lights flash Allow approximately 18 hours for a full charge

The pLink charger is compatible with 100-240 Volts AC; 50/60 Hz, allowing it to be used worldwide with the appropriate country adapter. If the shape of the plug does not fit the power outlet, use an attachment plug adapter of the proper configuration for the power outlet.

NOTE: The Mia 2 handle is not compatible with the charging cradle for the full-size Clarisonic models.

CLARISONIC® CUSTOMER SERVICE AND LIMITED WARRANTY INFORMATION

Congratulations on your purchase! We value our customers and aim to provide the highest quality products to ensure customer satisfaction. Please use this as your reference for any customer service or warranty needs you may have in the future. We also encourage you to register your product at www.clarisonic.com/registration.

We are happy to offer a 90 day money back guarantee. If you are for any reason dissatisfied with the purchase of your Mia 2 from an authorized dealer, call Customer Service at 888-525-2747 to make arrangements for the return.

Clarisonic's warranty obligations are limited to the terms set out below.

1. Warranty Coverage

- a) For the duration of the Warranty Period, Clarisonic warrants the Product against defects in materials and workmanship arising from Normal Use of the Product.
- b) If there is a defect in the Product which is covered by this Limited Warranty, Clarisonic agrees to exchange the Product with a new equivalent Product. This is the sole remedy available for breach of warranty.
- c) This Limited Warranty is exclusive of all other warranties, whether oral or written, express or implied. There are no implied warranties created by the manufacture, sale, or use of the Product. If Clarisonic cannot lawfully disclaim implied warranties under this Limited Warranty, all such warranties, including warranty of merchantability and fitness for a particular purpose, are limited in duration of this Limited Warranty. Some States do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

2. How to get warranty service or for general customer service inquiries

In order to receive service under this Limited Warranty, please call Customer Service at 1-888-525-2747 who will direct you how to proceed.

3. Limitations

- a) This warranty is limited and may be relied upon only:
 - (i) by the original end user of Clarisonic's Product; and

(ii) where the Product was manufactured by or for Clarisonic and sold by an authorized distributor.

- b) To obtain service under this Limited Warranty, you will be required to provide Clarisonic with original proof of purchase date or you must have registered your Product. Registering your Product permits Clarisonic to contact you in the event of a product question or recall, allows you to sign up to receive future correspondence from us and gives you easy access to the latest Clarisonic news and information.
- c) This Limited Warranty does not apply where the Product is subjected to use that does not constitute Normal Use, including but not limited to personal injury or property damage arising from misuse of the Product.

4. Exclusions

Clarisonic is not responsible for any indirect, incidental, special or consequential damages arising out of the use of the Product, whether arising from an electrical issue or otherwise. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

5. Validity

This Limited Warranty is valid only in the USA.

6. Definitions

- a) "Normal Use" means ordinary consumer use under normal home conditions according to the instruction manual included with the Product. It does not include using the Product with a voltage converter.
- b) "Product" means **Mia 2**.
- c) "Warranty Period" means **2 years** from the date of purchase of the Product.

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including but not limited to the following:

READ ALL INSTRUCTIONS BEFORE USE

DANGER—To reduce the risk of electrocution:

- 1. Do not** place or store the pLink® charger or plug where it can fall or be pulled into a tub or sink.
- 2. Do not** place the pLink charger in or drop the charger or plug into water or other liquid. Charger unit is not for immersion or for use in the shower.
- 3. Do not** reach for a pLink charger or plug that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons

1. Close supervision is necessary when this product is used by, on, or near children or physically challenged persons.
2. Use this product only for its intended use as described in this manual. **Do not** use attachments not recommended by the manufacturer.
3. Keep the cord away from heated surfaces.
4. Never use while sleeping or drowsy.
5. Do not use outdoors or where oxygen is being administered.

Never operate the Clarisonic brush handle if it is damaged. Do not operate the charger if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call Clarisonic at 888-525-2747.

SAVE THESE INSTRUCTIONS

The handle and the charger have no serviceable parts.

The supply cord cannot be replaced. If the cord is damaged, the charger must be unplugged and replaced. Call Clarisonic at 888-525-2747.

NOTE: This equipment has been tested and found to comply with Part 18 of the FCC Rules.

IMPORTANT CAUTIONS AND WARNINGS

If you are under a doctor's care for any skin condition or if you think you may have a skin condition, please consult your physician before using the Clarisonic Mia 2. Refer to our website for more information.

We recommend that you **do not** share brush heads.

We recommend that you start with one of the Clarisonic cleansers that have been optimized for gentle daily use with Clarisonic Skin Cleansing Systems. **Do not** use Mia 2 with jagged exfoliating particles such as shells. Clarisonic brushes may be used with soft, rounded exfoliating particles.

Using Mia 2 to remove makeup may stain the bristles, but will not affect performance. If discoloration occurs, clean the brush head with soap and water.

This product uses magnets.

CARING FOR YOUR *Mia 2*[™]

To keep your Mia 2 in optimum condition, care for it as follows: Do not use abrasive cleansers or chemicals to clean any part of Mia 2. Do not put any part of the Mia 2 in the dishwasher.

HANDLE

Once a week remove the brush head and wash the handle using warm soapy water to remove any residue buildup. The handle is sealed and fully waterproof. Never attempt to open the brush handle for any reason.

CHARGER

IMPORTANT: Unplug the charger, then wipe it with a soft, damp cloth. Do not immerse the charger in water.

BRUSH HEADS

We recommend that the Clarisonic brush head be replaced every 3 months as the bristles become fatigued and less effective over time. Once a week, remove the brush head from the handle and rinse with warm soapy water to remove any residue.

To remove the brush head, ① grip the brush head firmly, then push and twist it counter-clockwise (like a medicine cap). ② Pull the head away from the handle.

To attach the brush head, push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

TIP: Use the brush head cap to easily remove and attach the brush head with a simple twist.



REGISTER TODAY

Register to become a Clarisonic Preferred Customer and receive a \$25 savings offer!*

To register your Clarisonic Mia 2 go to www.clarisonic.com/registration. Sign up for Clarisonic Email and gain access to sneak previews of new product introductions and great insider skin care tips.

888-525-2747 | clarisonic.com

Clarisonic respects your privacy; we do not share your personal information with any third parties.

*See www.clarisonic.com/registration for \$25 Savings offer requirements.

Visit Clarisonic.com for more comprehensive information including product user guide updates, customer reviews, frequently asked questions, and more.

The Clarisonic logo features the brand name in a lowercase, sans-serif font. The letter 'i' is stylized with three horizontal lines above it, resembling a sound wave or a brush head.

© Pacific Bioscience Laboratories, Inc. 2011.
All rights reserved. Clarisonic, Mia, pLink, Opal and T-TIMER are registered trademarks and Mia 2 is a trademark of Pacific Bioscience Laboratories, Inc.

Pacific Bioscience Laboratories, Inc.
17275 Northeast 67th Court
Redmond, WA 98052
Toll Free: 888-5-CLARISONIC or 888-525-2747

Assembled in USA

PBL06354