

clarisonic



PRO SONIC SKIN
CLEANSING

FOR FACE AND BODY

User Guide

Four Speeds + Body Setting

Three-Year Warranty

Adjustable T-Timer[®]

Charging Cradle

Body Brush Head

Beautiful skin begins with cleaner skin.
Cleaner skin begins with Clarisonic.

Become a **Clarisonic Preferred Customer**

Details on back



A HANDLE

B BRUSH HEAD (Sensitive)

C ON/OFF BUTTON

D SPEED BUTTON

E SPEED INDICATOR

F CHARGE INDICATOR

G CHARGING CRADLE

YOUR CLARISONIC® PRO

The essential first step in your daily skin care ritual, Clarisonic PRO is a professional-caliber brush that uses a gentle sonic micro-massage action to cleanse deeply. Clarisonic PRO gently clears pores without harsh abrasion or chemicals, cleansing so effectively that skin care products absorb better. Results include 6x better cleansing than manual cleansing, reduced appearance of pores, fine lines and wrinkles, and improved skin tone.†

The PRO handle is waterproof for use in the shower or bathtub. Refer to Important Safeguards regarding the charger.

† Data on file.


READ ALL INSTRUCTIONS BEFORE USE

TO USE

Prior to the first use, charge the Clarisonic PRO handle for 24 hours.

- If you use makeup, remove eye makeup by hand.
- Wet your skin and the brush head with warm water.
- Liberally apply cleanser to your skin or to the brush head.
- Push the on/off button to turn on your PRO.
- Select desired speed.
- Follow T-TIMER® prompts while gently moving brush head in small circular motions.
- PRO will automatically shut off after the cleansing cycle.

NOTE: Keep brush head flush to the skin. Pressing too hard will impede the motion and reduce effectiveness.

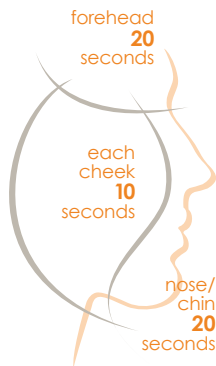

FEATURES OF YOUR PRO

SPEED SETTINGS

The Clarisonic PRO offers a choice of 4 speeds: pro, high, normal and low. Speed is indicated both audibly and visually. To change speeds, press the speed button while the Clarisonic PRO is on. The factory setting is low speed.

Speed settings for facial cleansing

Speed	Audible indication	Visible indication
Pro	5 ascending beeps	both red lights on
High	4 ascending beeps	upper red light on
Normal	3 ascending beeps	lower red light on
Low	3 descending beeps	no red lights on

Body modes for cleansing targeted areas of the body

Constant	no beeps	upper red light on
Pulse	no beeps	lower red light on

CLEANSING TIMER (T-TIMER®)

For even and thorough cleansing of your face, the PRO features a proprietary T-TIMER that beeps and pauses momentarily to indicate it is time to move to another part of your face. We recommend the one-minute setting: 20 seconds on your forehead, 20 seconds on your nose/chin, and 10 seconds on each cheek.

T-TIMER settings for facial cleansing are indicated by different audible sequences. To change the setting, press and hold the on/off button for 2 seconds. To change to a different setting, release the on/off button, then press twice and hold.

Audible indication	Cleansing duration	T-TIMER beeps
1 long beep & 2 short beeps	2 minutes	at 40, 80, and 100 seconds
1 long beep only	2 minutes	none
1 long beep & 1 short beep	1 minute (this is factory selected default)	at 20, 40, and 50 seconds

With optional Body Brush Head attached

No beeps	3 minutes	none
----------	-----------	------

To pause the cleansing cycle for up to 30 seconds, press the on/off button. The red lights flash in pause mode. To resume, press the on/off button.

CHARGING

Your system kit includes a charging cradle to hold and charge the brush handle.

Place your PRO in its charging cradle overnight to recharge it. Allow 24 hours for a full charge. A full charge allows up to 30 minutes of use, and about 20 minutes of use with the optional Body Brush Head. The green lights on the back of the handle indicate charge level. When the battery is low, the brush handle will beep immediately after use to alert you to place it in the cradle for charging.

If your PRO stops working, place it in the charger for a minimum of 5 hours. If the issue is not resolved, please contact Customer Service.

UNIVERSAL CHARGING CRADLE for worldwide use

Compatible with international and domestic outlets (100-240 Volts AC; 50/60 Hz) with the respective country plug adapter.

If the shape of the plug does not fit the power outlet, use an attachment plug adapter of the proper configuration for the power outlet.

CLARISONIC® CUSTOMER SERVICE AND LIMITED WARRANTY INFORMATION

Congratulations on your purchase! We value our customers and aim to provide the highest quality products to ensure customer satisfaction. Please use this as your reference for any customer service or warranty needs you may have in the future. We also encourage you to register your product at www.clarisonic.com/registration.

We are happy to offer a 90 day money back guarantee. If you are for any reason dissatisfied with the purchase of your PRO from an authorized dealer, call Customer Service at 888-525-2747 to make arrangements for the return.

Clarisonic's warranty obligations are limited to the terms set out below.

1. Warranty Coverage

- a) For the duration of the Warranty Period, Clarisonic warrants the Product against defects in materials and workmanship arising from Normal Use of the Product.
- b) If there is a defect in the Product which is covered by this Limited Warranty, Clarisonic agrees to exchange the Product with a new equivalent Product. This is the sole remedy available for breach of warranty.
- c) This Limited Warranty is exclusive of all other warranties, whether oral or written, express or implied. There are no implied warranties created by the manufacture, sale, or use of the Product. If Clarisonic cannot lawfully disclaim implied warranties under this Limited Warranty, all such warranties, including warranty of merchantability and fitness for a particular purpose, are limited in duration of this Limited Warranty. Some States do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you.

2. How to get warranty service or for general customer service inquiries

In order to receive service under this Limited Warranty, please call Customer Service at 1-888-525-2747 who will direct you how to proceed.

3. Limitations

- a) This warranty is limited and may be relied upon only:
- (i) by the original end user of Clarisonic's Product; and
 - (ii) where the Product was manufactured by or for Clarisonic and sold by an authorized distributor.
- b) To obtain service under this Limited Warranty, you will be required to provide Clarisonic with original proof of purchase date or you must have registered your Product. Registering your Product permits Clarisonic to contact you in the event of a product question or recall, allows you to sign up to receive future correspondence from us and gives you easy access to the latest Clarisonic news and information.
- c) This Limited Warranty does not apply where the Product is subjected to use that does not constitute Normal Use, including but not limited to personal injury or property damage arising from misuse of the Product.

4. Exclusions

Clarisonic is not responsible for any indirect, incidental, special or consequential damages arising out of the use of the Product, whether arising from an electrical issue or otherwise. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

5. Validity

This Limited Warranty is valid only in the USA.

6. Definitions

- a) "Normal Use" means ordinary consumer use under normal home conditions according to the instruction manual included with the Product. It does not include using the Product with a voltage converter.
- b) "Product" means **PRO**.
- c) "Warranty Period" means **3 years** from the date of purchase of the Product.

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including but not limited to the following:

READ ALL INSTRUCTIONS BEFORE USE

DANGER—To reduce the risk of electrocution:

- 1. Do not** place or store the Clarisonic charging cradle where it can fall or be pulled into a tub or sink.
- 2. Do not** place the Clarisonic charging cradle in or drop the cradle or plug into water or other liquid. Charger unit is not for immersion or for use in the shower.
- 3. Do not** reach for a Clarisonic charging cradle or plug that has fallen into water. Unplug immediately.

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons

1. Close supervision is necessary when this product is used by, on, or near children or physically challenged persons.
2. Use this product only for its intended use as described in this manual. **Do not** use attachments not recommended by the manufacturer.
3. Keep the cord away from heated surfaces.
4. Never use while sleeping or drowsy.
5. Do not use outdoors or where oxygen is being administered.

Never operate the Clarisonic brush handle if it is damaged. Do not operate the charging cradle if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Call Clarisonic at 888-525-2747.

SAVE THESE INSTRUCTIONS

The handle and the charging cradle have no serviceable parts.

The supply cord cannot be replaced. If the cord is damaged, the charging cradle must be unplugged and replaced. Call Clarisonic at 888-525-2747.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. For further details please see our website.

IMPORTANT CAUTIONS AND WARNINGS

If you are under a doctor's care for any skin condition or if you think you may have a skin condition, please consult your physician before using the Clarisonic PRO. Refer to our website for more information.

We recommend that you **do not** share brush heads.

We recommend that you start with one of the Clarisonic cleansers that has been optimized for gentle daily use with the Clarisonic PRO. **Do not** use the Clarisonic PRO with jagged exfoliating particles such as shells. Clarisonic brushes may be used with soft, rounded exfoliating particles.

Using the Clarisonic PRO to remove makeup may stain the bristles, but will not affect performance. If discoloration occurs, clean the brush head with soap and water.

This product uses magnets.

CARING FOR YOUR CLARISONIC

To keep your Clarisonic PRO in optimum condition, care for it as follows. Do not use abrasive cleaners or chemicals to clean any part of the PRO. Do not put any part of the PRO in a dishwasher.

HANDLE

Once a week remove the brush head and wash the handle using warm soapy water to remove any residue buildup. The handle is sealed and fully waterproof. Never attempt to open the brush handle for any reason.

INFREQUENT USE: The Clarisonic PRO handle needs to receive a charge occasionally. If you rarely use the handle, place it in the charger every 3 months to maintain its charging capability.

We recommend that you keep the handle in the charging cradle when not in use. Secure the cord with a tie-wrap.

CHARGING CRADLE

IMPORTANT: Unplug the charging cradle before you clean it. After unplugging the cradle, wipe it with a soft, damp cloth. Do not immerse the charging cradle in water.


BRUSH HEADS

We recommend that the brush head be replaced every 3 months as the bristles become fatigued and less effective over time. Once a week, remove the brush head from the handle and rinse with warm soapy water to remove any residue.

To remove the brush head, ① grip the brush head firmly, then push and twist it counter-clockwise (like a medicine cap). ② Pull the head away from the handle.

To attach the brush head, push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

TIP: Use the brush head cap to easily remove and attach the brush head with a simple twist.

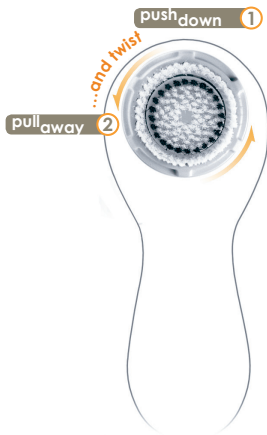

REGISTER TODAY

Register and become a Clarisonic Preferred Customer.

To register your PRO go to www.clarisonic.com/registration. Sign up for Clarisonic Email and gain access to sneak previews of new product introductions and great insider skin care tips.

888-525-2747 | clarisonic.com

Clarisonic respects your privacy; we do not share your personal information with any third parties.

Visit clarisonic.com for more comprehensive information including product user guide updates, customer reviews, frequently asked questions, and more.



© Pacific Bioscience Laboratories, Inc. 2012.
All rights reserved. Clarisonic and T-TIMER are registered trademarks of Pacific Bioscience Laboratories, Inc.

Pacific Bioscience Laboratories, Inc.
17275 Northeast 67th Court
Redmond, WA 98052 USA
Toll Free: 888-5-CLARISONIC or 888-525-2747

Assembled in USA

PBL04600E