

A large, white Clarisonic Mia Smart facial cleansing device is shown on the right side of the page. It features a circular head with a central opening and a ring of pink bristles. The handle has a power button, a mode selector with three options (Daily Cleanse, Gentle, Smart), and a Bluetooth symbol.

clarisonic

MIA SMART

USER GUIDE

One device with infinite skin benefits for cleansing, anti-aging, exfoliation and more. Clinically proven to help you achieve healthy, younger-looking skin.

Daily Cleanse

Gentle

Smart



CLEANSE



FIRM



AWAKEN



EXFOLIATE

clarisonic



Getting started

Download the Clarisonic app



With the app, you can customize the intensity & duration of your routine, track your progress, set up reminders and more.



Attach brush head or applicator

Align the attachment to the pins, push down and rotate clockwise until it locks into place.



Don't remove the tab on the back

This contains the dye for the replacement timer on newer brush heads.



How to use

Charge before first use

Place your Mia Smart in the stand, plug in and charge for 18 hours before initial use.



Wet brush head & face; add cleanser

Use any cleanser except those with jagged exfoliating particles, such as shells or micro-beads.



Turn on device & follow routine

Mia Smart has a guided timer based on routine:
Forehead: 20 seconds
Chin & nose: 20 seconds
Cheeks: 10 seconds each



Optimize your routine

Sonic Exfoliator

Uniquely textured exfoliating brush gently unclogs pores and buffs away dryness to accelerate skin cell turnover.



Firming Massage Head

Powerful anti-aging for face, neck and décolleté. Lifts and sculpts contours; smooths the look of lines and wrinkles.



Sonic Awakening Eye Massager

Visibly reduce puffiness and crow's feet fine lines with 18,000 cooling micro-massages.



Compatible attachments

ANTI-AGING & MAKEUP APPLICATORS



Firming Massage Head
Firm & uplift



Eye Massager
Under-eye puffiness



Sonic Exfoliator
Rough, uneven skin



Sonic Foundation Brush
Makeup blending

EVERYDAY CLEANSING BRUSH HEADS



Daily Radiance
All skin types
(included)



Sensitive Skin
Redness-prone skin



Men's Daily
Most invigorating
cleanse

SPECIALTY CLEANSING BRUSH HEADS



Charcoal
Detox skin from
oil & pollutants



Acne Cleansing
Acne-prone skin



Deep Pore
Clogged, enlarged
pores



Revitalizing
Fine, dry lines



Cashmere
Dry, dehydrated
& delicate skin



Turbo Body
Body scrub &
massage

Proper care & maintenance

Rinse daily, deep clean weekly

After daily use, rinse with water and dry with a towel. Once a week, remove attachments from device and thoroughly clean.



Charge device when light turns red

Make sure device is dry before placing it in the charging stand. Plug in and charge for 18 hours.



Replace brush heads regularly

Brush heads wear out over time and should be replaced. Newer brush heads have a replacement indicator that turns red to remind you.





EMAIL: support@support.clarisonic.com

LIVE CHAT: M - F 9:00 a.m. - 8:00 p.m. EST

PHONE: 1-888-525-2747

M - F 9:00 a.m. - 8:00 p.m. EST

clarisonic